


### User Guide


This guidance should be read in conjunction with the IFU supplied with the specific Breathing Circuit, the Flow Driver and Heater Humidifier




#### Step 1

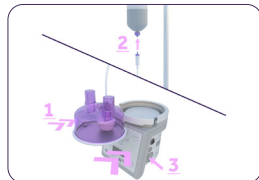

#### Step 2

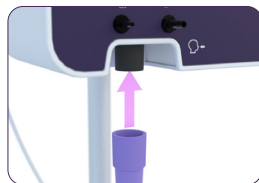

#### Step 3

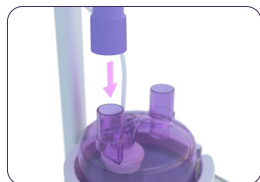

#### Step 4




#### Step 5



#### Step 6



#### Step 7

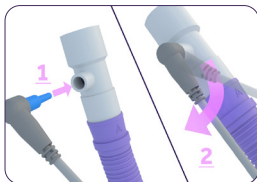

#### Step 8

