


User Guide


This guidance should be read in conjunction with the IFU supplied with the specific Breathing Circuit, the Flow Driver and Heater Humidifier




Step 1

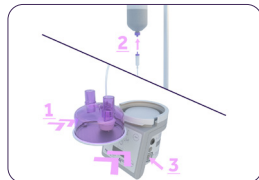

Step 2

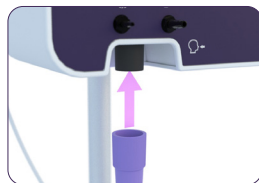

Step 3

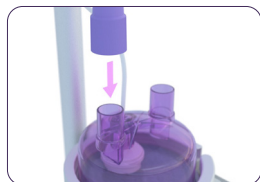

Step 4




Step 5



Step 6



Step 7

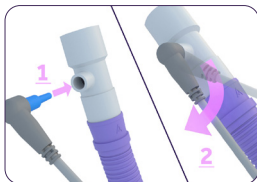

Step 8

