


User Guide


This guidance should be read in conjunction with the IFU supplied with the specific Breathing Circuit, the Flow Driver and Heater Humidifier

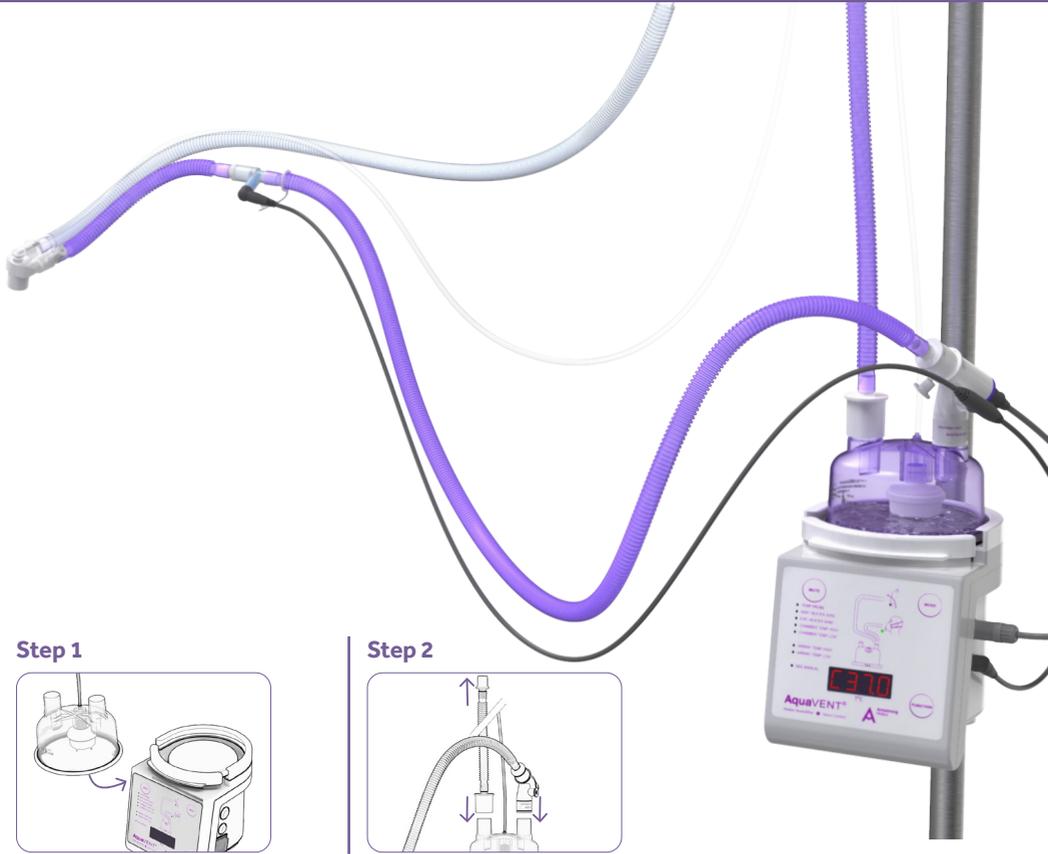


Step 1




Step 2

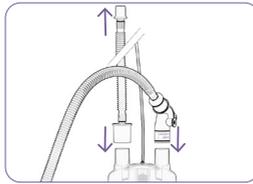

Step 3

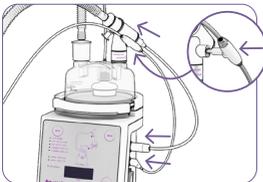

Step 4

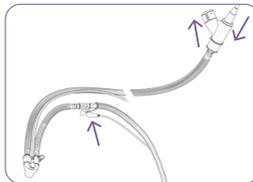

Step 5

